

ORIGINAL HP PAPER COMPATIBILITY OVERVIEW



HP Inkjet Printers




HP Everyday Photo Paper		HP Advanced Photo Paper			HP Premium Photo Paper		HP Premium Plus Photo Paper					HP Creative Paper	HP Professional Paper			
10 x 15 (with tab)	A4	10 x 15 (borderless)	13 x 18 (borderless)	A4	A3/A3+	10 x 15 (with tab)	A4	10 x 15 (with tab)	10 x 15 (borderless)	13 x 18 (borderless)	A4	A3	HP Iron-on Transfers	A4 120 g	A3 120 g	A4 180 g

HP Deskjet	10 x 15 (with tab)	A4	10 x 15 (borderless)	13 x 18 (borderless)	A4	A3/A3+	10 x 15 (with tab)	A4	10 x 15 (with tab)	10 x 15 (borderless)	13 x 18 (borderless)	A4	A3	HP Iron-on Transfers	A4 120 g	A3 120 g	A4 180 g
HP Deskjet F300 AiO series	•	•			•		•	•	•			•		•			•
HP Deskjet 450 series	•	•			•		•	•	•			•		•			•
HP Deskjet 460 series	•	•	•		•		•	•	•	•		•		•			•
HP Deskjet 710c/720c/722c/815c	•	•			•		•	•	•			•		•			•
HP Deskjet D730*	•	•	•		•		•	•	•			•		•			•
HP Deskjet F735 AiO*	•	•			•		•	•	•			•		•			•
HP Deskjet 880c/890c/895cxi	•	•			•		•	•	•			•		•			•
HP Deskjet 916c/920c/940c	•	•			•		•	•	•			•		•			•
HP Deskjet 930c/cm/950c/959c/960c/970cxi/980cxi/990cxi/cm/995c	•	•			•		•	•	•			•		•			•
HP Deskjet 1120c/1125c	•	•			•		•	•	•			•		•			•
HP Deskjet 1180c/1220c/1220ps/1280	•	•			•		•	•	•			•		•			•
HP Deskjet D1311/D1320/D1330/D1341/D1360	•	•	•		•		•	•	•			•		•			•
HP Deskjet D1420/D1430/D1445/D1455/D1460/D1468/D1470/D1560	•	•	•		•		•	•	•			•		•			•
HP Deskjet F2180 AiO/F2187 AiO/F2275 AiO/F2280 AiO/F2290 AiO	•	•	•		•		•	•	•			•		•			•
HP Deskjet D2320/D2330/D2345/D2360/D2430/D2445/D2460	•	•	•		•		•	•	•			•		•			•
HP Deskjet D2560	•	•	•		•		•	•	•			•		•			•
HP Deskjet 3320/3325/3420/3425/3520/3535/3550/3745	•	•			•		•	•	•			•		•			•
HP Deskjet 3645/3647/3650/3845	•	•			•		•	•	•			•		•			•
HP Deskjet 3810/3816/3820/3822	•	•			•		•	•	•			•		•			•
HP Deskjet 3920/3930/3940	•	•			•		•	•	•			•		•			•
HP Deskjet F4140 AiO/F4172 AiO/F4180 AiO/F4190 AiO	•	•			•		•	•	•			•		•			•
HP Deskjet D4145/D4155/D4160/D4260/D4360	•	•			•		•	•	•			•		•			•
HP Deskjet 5145/5150/5151	•	•			•		•	•	•			•		•			•
HP Deskjet 5440/5740/5745/5940	•	•			•		•	•	•			•		•			•
HP Deskjet 5550/5552	•	•			•		•	•	•			•		•			•
HP Deskjet 5650/5652/5655/5850	•	•			•		•	•	•			•		•			•
HP Deskjet 6122/6127	•	•			•		•	•	•			•		•			•
HP Deskjet 6520/6540 series/6840/6940 series/6980 series	•	•			•		•	•	•			•		•			•
HP Deskjet 6620	•	•			•		•	•	•			•		•			•
HP Deskjet 9300/9600 series	•	•			•		•	•	•			•		•			•
HP Deskjet 9800 series	•	•			•		•	•	•			•		•			•
HP Photosmart	10 x 15 (with tab)	A4	10 x 15 (borderless)	13 x 18 (borderless)	A4	A3/A3+	10 x 15 (with tab)	A4	10 x 15 (with tab)	10 x 15 (borderless)	13 x 18 (borderless)	A4	A3	HP Iron-on Transfers	A4 120 g	A3 120 g	A4 180 g
HP Photosmart 100/130/230	•	•			•		•	•	•			•		•			•
HP Photosmart 145/245	•	•			•		•	•	•			•		•			•
HP Photosmart A310/A311/A314/A316/A320/335/385	•	•			•		•	•	•			•		•			•
HP Photosmart 422/425/428/A432/A433/A436/A440 series/A516/A526	•	•			•		•	•	•			•		•			•
HP Photosmart 325/375	•	•			•		•	•	•			•		•			•
HP Photosmart 475/A532/A536/A612/A618/A626/A636/A717/A826	•	•			•		•	•	•			•		•			•
HP Photosmart p1000/p1100/1115/1215/1218/1315	•	•			•		•	•	•			•		•			•
HP Photosmart 2570 AiO/2575 AiO	•	•			•		•	•	•			•		•			•
HP Photosmart 2610 AiO/2710 AiO	•	•			•		•	•	•			•		•			•
HP Photosmart 3108/3110/3207/3210/3310 AiO	•	•			•		•	•	•			•		•			•
HP Photosmart C3170 AiO/C3180 AiO/C3190 AiO	•	•			•		•	•	•			•		•			•
HP Photosmart C4180 AiO/C4190 AiO/F4240 AiO/F4272 AiO/F4275 AiO/F4280 AiO	•	•			•		•	•	•			•		•			•
HP Photosmart C4270/C4272/C4280/C4340/C4380/C4390 AiO	•	•			•		•	•	•			•		•			•
HP Photosmart C4440 AiO/C4450 AiO/C4475 AiO/C4480 AiO/C4485 AiO	•	•			•		•	•	•			•		•			•
HP Photosmart C4524 AiO/C4580 AiO/C4585 AiO	•	•			•		•	•	•			•		•			•
HP Photosmart D5160/C5180 AiO	•	•			•		•	•	•			•		•			•
HP Photosmart C5280 AiO, C5288	•	•			•		•	•	•			•		•			•
HP Photosmart C5324 AiO/C5380 AiO/C5390 AiO/D5460	•	•			•		•	•	•			•		•			•
HP Photosmart D5360 AiO	•	•			•		•	•	•			•		•			•
HP Photosmart D6160/C6180 AiO	•	•			•		•	•	•			•		•			•
HP Photosmart C6240/C6250/C6270/C6280/C6285/C6288 AiO	•	•			•		•	•	•			•		•			•
HP Photosmart C6324 AiO/C6380 AiO	•	•			•		•	•	•			•		•			•
HP Photosmart 7150/7260/7345/7350/7450/7459/7550	•	•			•		•	•	•			•		•			•
HP Photosmart D7160/C7180 AiO/D7260/C7280 AiO/D7360/D7460	•	•			•		•	•	•			•		•			•
HP Photosmart 7655/7660/7755/7760/7762/7960 series	•	•			•		•	•	•			•		•			•
HP Photosmart 8050/8150/8250/8450 series	•	•			•		•	•	•			•		•			•
HP Photosmart C8150 AiO/C8180 AiO	•	•			•		•	•	•			•		•			•
HP Photosmart Pro B8350	•	•			•		•	•	•			•		•			•

* For sale only in Poland

ORIGINAL HP PAPER COMPATIBILITY OVERVIEW

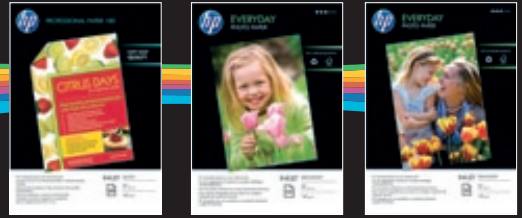

HP Inkjet Printers



	HP Everyday Photo Paper		HP Advanced Photo Paper				HP Premium Photo Paper		HP Premium Plus Photo Paper					HP Creative Paper	HP Professional Paper		
	10 x 15 (with tab)	A4	10 x 15 (borderless)	13 x 18 (borderless)	A4	A3/A3+	10 x 15 (with tab)	A4	10 x 15 (with tab)	10 x 15 (borderless)	13 x 18 (borderless)	A4	A3	HP Iron-on Transfers	A4 120 g	A3 120 g	A4 180 g
HP Photosmart																	
HP Photosmart B8550/B8558	•	•	•	•	•	•									•	•	•
HP Photosmart Premium Fax All-in-one	•	•	•	•	•	•			•	•	•	•		•	•	•	•
HP PSC 500	•	•			•	•			•	•	•	•		•	•	•	•
HP PSC 720/750/950	•	•			•	•			•	•	•	•		•	•	•	•
HP PSC 1110	•	•							•	•	•	•		•	•	•	•
HP PSC 1200/1205/1210/1213/1215/1217/1219	•	•							•	•	•	•		•	•	•	•
HP PSC 1310/1311/1312/1315 series/1317	•	•							•	•	•	•		•	•	•	•
HP PSC 1340/1350/1355									•	•	•	•		•	•	•	•
HP PSC 1402/1410/1415/1417	•	•							•	•	•	•		•	•	•	•
HP PSC 1507/1510 series	•	•							•	•	•	•		•	•	•	•
HP PSC 1600/1610					•	•			•	•	•	•		•	•	•	•
HP PSC 2105/2108/2110/2115/2171/2175/2179/2210	•	•							•	•	•	•		•	•	•	•
HP PSC 2350/2355 series	•	•							•	•	•	•		•	•	•	•
HP PSC 2410 Photosmart AiO/2510 Photosmart AiO	•	•							•	•	•	•		•	•	•	•
HP Officejet																	
HP Officejet H470 series	•	•	•	•	•	•			•	•	•	•		•	•	•	•
HP Officejet Pro K550 series	•	•	•	•	•	•			•	•	•	•		•	•	•	•
HP Officejet Pro K850 series	•	•	•	•	•	•			•	•	•	•		•	•	•	•
HP Officejet Pro 1170c/1175c/145/t65/t45/t65	•	•							•	•	•	•		•	•	•	•
HP Officejet J3508 AiO/J3608 AiO/J3640 AiO/J3650 AiO/J3680 AiO	•	•							•	•	•	•		•	•	•	•
HP Officejet 4105 AiO/4110 AiO	•	•							•	•	•	•		•	•	•	•
HP Officejet 4212 AiO/4215 AiO/4219 AiO/4252 AiO/4255 AiO	•	•							•	•	•	•		•	•	•	•
HP Officejet 4315 AiO/4355 AiO	•	•							•	•	•	•		•	•	•	•
HP Officejet J4524 AiO/J4540 AiO/J4550 AiO/J4580 AiO	•	•							•	•	•	•		•	•	•	•
HP Officejet J4624 AiO/J4660 AiO/J4680 AiO	•	•							•	•	•	•		•	•	•	•
HP Officejet 5110 AiO	•	•							•	•	•	•		•	•	•	•
HP Officejet Pro K5300 series/K5400 series	•	•	•	•	•	•			•	•	•	•		•	•	•	•
HP Officejet 5505 AiO/5510 AiO/5515 AiO/5550 AiO	•	•							•	•	•	•		•	•	•	•
HP Officejet J5508 AiO/J5520 AiO	•	•							•	•	•	•		•	•	•	•
HP Officejet 5605 AiO/5607 AiO/5610 AiO/5615 AiO	•	•							•	•	•	•		•	•	•	•
HP Officejet J5730 AiO/J5780 AiO/J5785 AiO	•	•							•	•	•	•		•	•	•	•
HP Officejet 6110 AiO	•	•							•	•	•	•		•	•	•	•
HP Officejet 6205 AiO/6210 AiO/6215 AiO/7210 AiO	•	•							•	•	•	•		•	•	•	•
HP Officejet 6310 AiO/6315 AiO	•	•							•	•	•	•		•	•	•	•
HP Officejet J6405 AiO/J6410 AiO/J6415 AiO/J6480 AiO/J6488 AiO	•	•							•	•	•	•		•	•	•	•
HP Officejet 6000/6500/7000 series	•	•							•	•	•	•		•	•	•	•
HP Officejet K7100 series	•	•							•	•	•	•		•	•	•	•
HP Officejet 7310 AiO/7410 AiO	•	•							•	•	•	•		•	•	•	•
HP Officejet Pro L7480/L7555/L7580/L7590/L7680/L7780 AiO	•	•							•	•	•	•		•	•	•	•
HP Officejet Pro 8000/8500 series	•	•							•	•	•	•		•	•	•	•
HP Officejet Pro K8600 series/HP Deskjet 9300/9600 series	•	•							•	•	•	•		•	•	•	•
HP Business Inkjet 1000 series/1200 series	•	•							•	•	•	•		•	•	•	•
HP Business Inkjet 1100 series/2000 series	•	•							•	•	•	•		•	•	•	•
HP Business Inkjet 3000 series	•	•							•	•	•	•		•	•	•	•